

Operator's Manual

optris[®] CX



Infrared thermometer

Optris GmbH

Ferdinand-Buisson-Str. 14
13127 Berlin
Germany

Tel.: +49 30 500 197-0
Fax: +49 30 500 197-10

E-mail: info@optris.global
Internet: www.optris.global



Table of contents

Table of contents	3
1 General notes	6
1.1 Intended use	6
1.2 Warranty	7
1.3 Scope of delivery	7
1.4 Maintenance	8
1.5 Product overview	8
1.6 Factory Default Settings	9
2 Technical Data	10
2.1 Default settings	10
2.2 General specifications	11
2.3 Electrical specifications.....	12

2.4	Measurement specifications	13
2.5	Optical charts	14
2.6	CF-optics and protective window	16
3	Installation	17
3.1	Mechanical Installation	17
3.2	Electrical Installation	20
4	Software CompactConnect	24
4.1	Installation	24
5	Digital command set	26
6	Basics of Infrared Thermometry	27
7	Emissivity	28
7.1	Definition	28
7.2	Determination of unknown emissivity	29
7.3	Characteristic emissivity	30

Appendix A – Table of emissivity for metals	31
Appendix B - Table of emissivity for non-metals	32
Appendix C – Direct connection to a RS232 interface.....	33
Appendix D - Smart Averaging.....	34
Appendix E – Declaration of Conformity.....	35

1 General notes

1.1 Intended use

Thank you for choosing the **optris® CX** infrared thermometer.

The sensors of the optris CX series are non-contact infrared temperature sensors. They calculate the surface temperature based on the emitted infrared energy of objects [**► 6 Basics of Infrared Thermometry**].



The CX sensing head is a sensitive optical system. Please use only the thread for mechanical installation.



- Avoid abrupt changes of the ambient temperature.
- Avoid mechanical violence on the head – this may destroy the system (expiry of warranty).
- If you have any problems or questions, please contact our service department.



Read the manual carefully before the initial start-up. The producer reserves the right to change the herein described specifications in case of technical advance of the product.



► All accessories can be ordered according to the referred part numbers in brackets [].

1.2 Warranty

Each single product passes through a quality process. Nevertheless, if failures occur contact the customer service at once. The warranty period covers 24 months starting on the delivery date. After the warranty is expired the manufacturer guarantees additional 6 months warranty for all repaired or substituted product components. Warranty does not apply to damages, which result from misuse or neglect. The warranty also expires if you open the product. The manufacturer is not liable for consequential damage or in case of a non-intended use of the product.

If a failure occurs during the warranty period the product will be replaced, calibrated or repaired without further charges. The freight costs will be paid by the sender. The manufacturer reserves the right to exchange components of the product instead of repairing it. If the failure results from misuse or neglect the user has to pay for the repair. In that case you may ask for a cost estimate beforehand.

1.3 Scope of delivery

- CX incl. connection cable, mounting nut and operators manual

1.4 Maintenance

Blow off loose particles using clean compressed air. The lens surface can be cleaned with a soft, humid tissue (moistened with water) or a lens cleaner (e.g. Purosol or B+W Lens Cleaner).



Never use cleaning compounds which contain solvents (neither for the lens nor for the housing).

1.5 Product overview

Model	Model code	Measurement range	Spectral response	Optic	Specialty
CX	CX	-30 to 900 °C	8-14 µm	22:1	0,025 K resolution
	CX hs	-20 to 150 °C		15:1	

1.6 Factory Default Settings

At time of delivery the unit has the following pre-settings:

	CX	CX hs
Temperature range:	-18...500 °C	-20...150 °C
Output:	4...20 mA	
Emissivity:	0,950	
Transmissivity	1,000	
Smart Averaging:	active	
Ambient temperature source:	Head temperature	

2 Technical Data

2.1 Default settings



Smart Averaging means a dynamic average adaptation at high signal edges. [Activation via software only].
[▶ Appendix D - Smart Averaging]



If the unit is supplied together with the USB kit the output is already pre-set to digital communication (bidirectional).


2.2 General specifications

	CX	CX hs
Environmental rating:	IP65 (NEMA-4)	
Ambient temperature:	-20...75 °C	
Storage temperature:	-40...85 °C	
Relative humidity:	10...95 %, non-condensing	
Material	aluminum, black anodized	
Dimensions:	Diameter: 42 mm/ Length: 130 mm	
Weight:	350 g	
Cable length:	5 m	
Cable diameter:	4,3 mm	
Vibration:	IEC 60068-2-6 (sinus shaped), IEC 60068-2-64 (Broad band noise)	
Shock	IEC 60068-2-27 (25 G and 50 G)	

2.3 Electrical specifications

	CX	CX hs
Output/ analog:	4-20 mA/ scalable	
Output/ serial digital: ¹⁾	uni- (burst mode) or bi-directional	
Alarm output:	programmable open collector output/ 0...30 VDC; 500 mA	
Output impedances:	max 1000 Ω loop impedance	
Power supply:	5...30 VDC	

¹⁾ *Inverted RS232 signal, TTL, 9.6 kBaud*

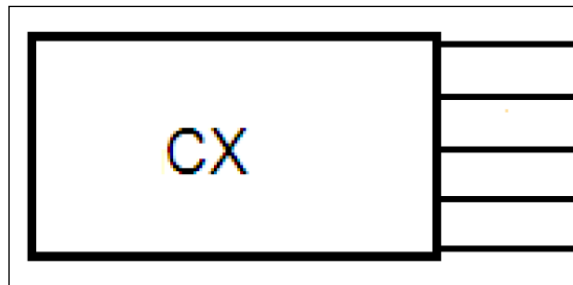

white	Current loop (+)
yellow	TxD (5 V)
green	RxD (5 V)/ Open-collector output
brown	Current loop (-)/ Ground (L)
black	Shield

Figure 1: Dimensions CX

2.4 Measurement specifications

	CX	CX hs
Temperature range IR:	-30...900 °C (scalable via software)	-20...150 °C scalable via software)
Spectral range:	8...14 μm	
Optical resolution:	22:1	15:1
CF-lens (optional):	0,6 mm@ 10 mm	0,8 mm@ 10 mm
Accuracy: ¹⁾	±1,4 °C or ±1,0 %	±1,0 °C or ±1,0 %
Repeatability: ¹⁾	±0,5 °C or ±0,7 %	±0,3 °C or ±0,3 %
Temperature resolution:	0,1 K	0,025 K (for temperatures > 20 °C)
Response time (90 % signal):	150 ms	
Warm-up time:	10 min	
Emissivity/ Gain:	0.100...1.100 (adjustable via software)	
Transmissivity:	0.100...1.000 (adjustable via software)	
Interface (optional):	USB programming interface	
Signal processing:	Average, peak hold, valley hold (adjustable via software)	
Software (optional):	CompactConnect	

¹⁾ at ambient temperature of 23±5 °C; whichever is greater

2.5 Optical charts



- The size of the measuring object and the optical resolution of the infrared thermometer determine the maximum distance between sensing head and measuring object.
- In order to prevent measuring errors the object should fill out the field of view of the optics completely. Consequently, the spot should at all times have at least the **same size** like the object or should be **smaller than** that.

As an alternative to the optical diagrams, the spot size calculator can also be used on the optris website <http://www.optris.com/spot-size-calculator>.

The following optical charts show the diameter of the measuring spot in dependence on the distance between measuring object and sensing head. The spot size refers to **90 % of the radiation energy**. The distance is always measured from the front edge of the sensor housing/ CF-lens holder/ air purge.

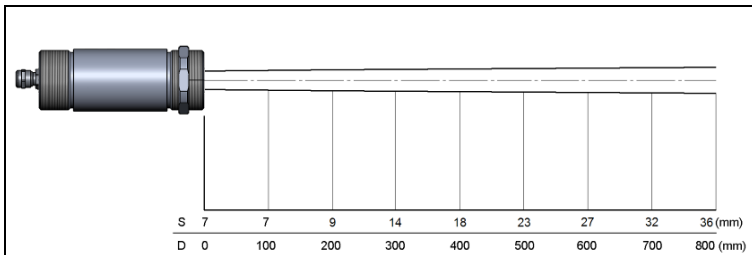


Figure 2: Optical chart optris CX (22:1)

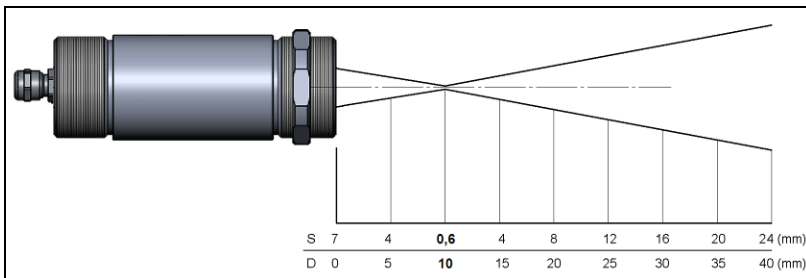


Figure 3: Optical chart optris CX with CF-lens (0.6 mm@ 10 mm)

2.6 CF-optics and protective window



- If the CF-lens is used, the transmission has to be set to **0.78**. To change this value the optional USB-Kit (including software) is necessary.
- The assigned transmission (average value) is a characteristic value which may have a certain scattering. If required the transmission has to be determined.

The optional CF-lens allows the measurement of small objects. For protection of the sensing head optics a protective window is available. The mechanical dimensions are equal to the CF lens.

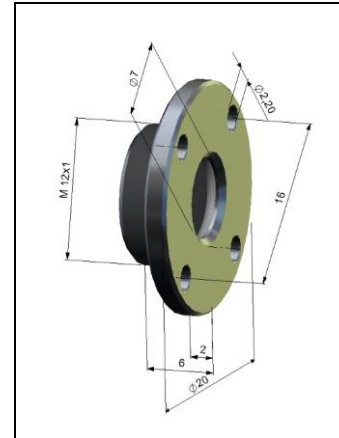


Figure 4: CF-lens [Order No.: ACCXCF]/
protective window [Order No.: ACCXPW]

3 Installation

3.1 Mechanical Installation

The CX is equipped with a 20 UNF-2B thread and can be installed either directly via the sensor thread or with the help of the hex nut (standard) to the mounting bracket available.

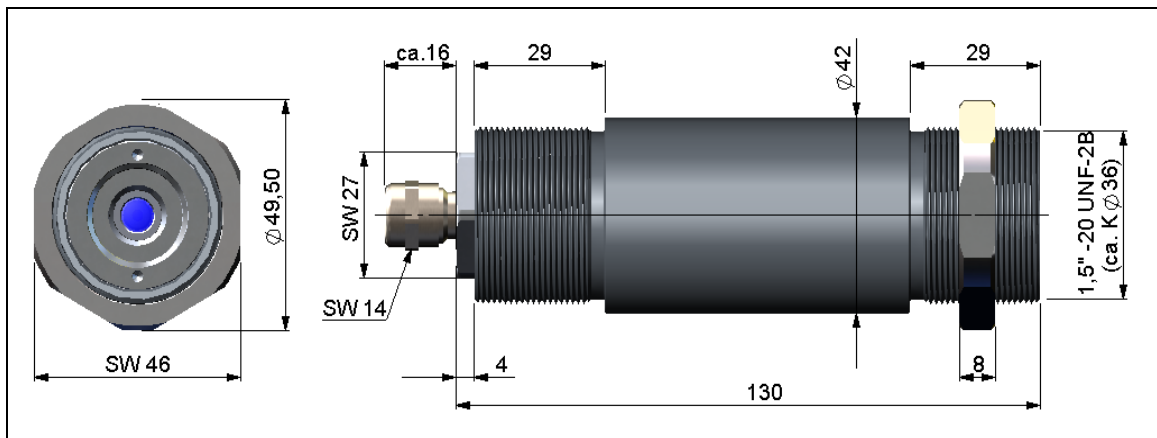


Figure 5: CX – Dimensions

Mounting bracket

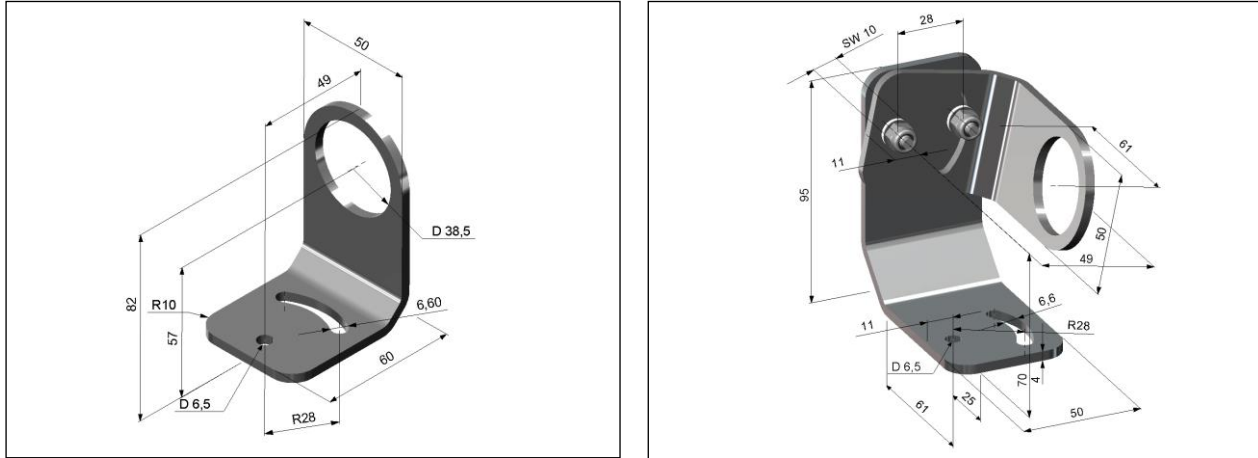


Figure 6: Mounting angle [Order No.: ACCXFB] and adjustment angle [Order No.: ACCXAB] for CX

Air purge collar



- Use oil-free, technically clean air only.
- The needed amount of air (approx. 2...10 l/ min.) depends on the application and the installation conditions on-site.

The lens must be kept clean at all times from dust, smoke, fumes and other contaminants in order to avoid reading errors. These effects can be reduced by using an **air purge collar**.

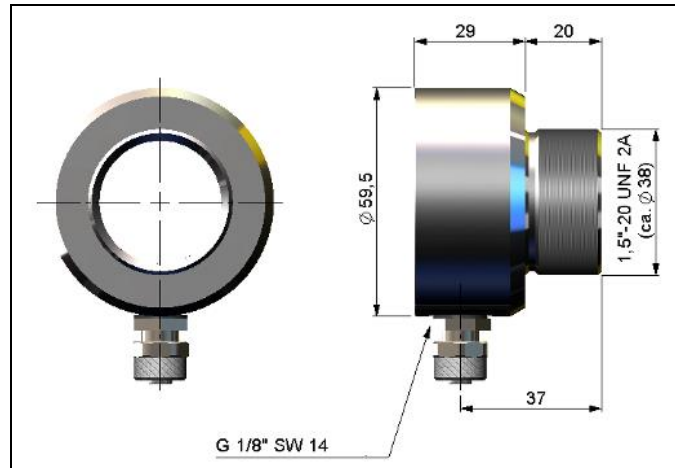


Figure 7: Air purge collar [Order No.: ACCXAP]; Hose connection: 6x8 mm

3.2 Electrical Installation

Analog device (mA-output)



- Use shielded cables only. The sensor shield has to be grounded.
- Use a separate, stabilized power supply unit with an output voltage in the range of **5–28 VDC** which can supply **100 mA**. The residual ripple should be max **200 mV**.
- The maximum loop impedance is 1000 Ω .

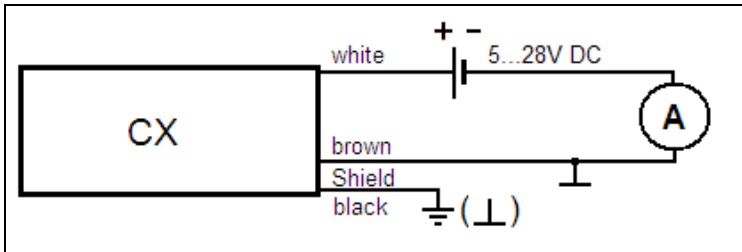


Figure 8: Wiring diagram of the analog device

Digital Communication

For digital communication the optional USB programming kit is required.



Figure 9: USB-Kit: USB programming adaptor incl. terminal block and software CD [**Order No.: ACCSUSBK**]

Connecting of the sensor cable and the USB cable

1. Connect each wire of the USB adapter cable with the same colored wire of the sensor cable by using the terminal block.
2. To switch off a contact press the screw driver into the block as shown in **Figure 10**.

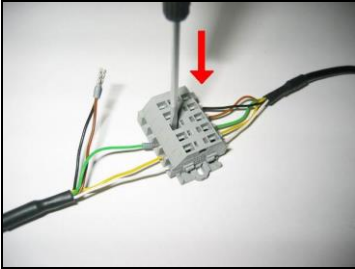


Figure 10: Connecting of the sensor cable and USB cable

The sensor is offering two ways of digital communication:

- bidirectional communication (sending and receiving data)
- unidirectional communication (burst mode – the sensor is sending data only)

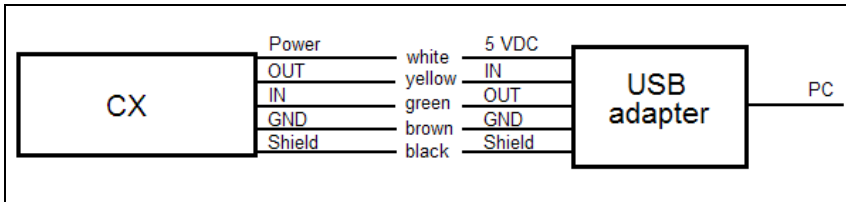


Figure 11: Device with digital pin

Analog + Digital

The optris CX is able to work in the digital mode and simultaneously as analog device (4-20 mA). In this case the sensor will be powered by the USB interface (5 V).

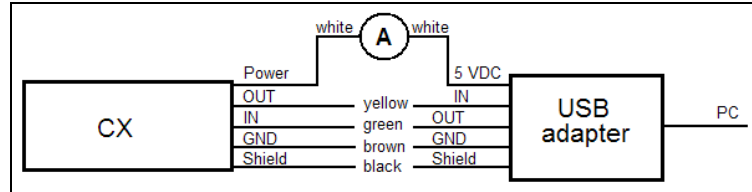


Figure 12: Simultaneous analog and digital application

Analog + Alarm

The alarm output (open collector output) can control an external relay. In addition the analog output can be used simultaneously.

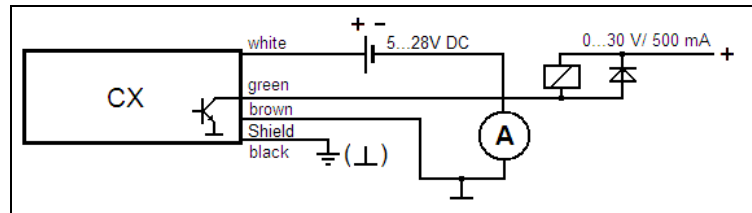


Figure 13: Analog device with alarm output

4 Software CompactConnect

Minimum system requirements:



- Windows 7, 8, 10
- USB interface
- Hard disc with at least 30 MByte of free space
- At least 128 MByte RAM
- CD-ROM drive



A detailed description is provided in the software manual on the software CD.

4.1 Installation

1. Insert the installation CD into the according drive on your computer. If the **autorun option** is activated the installation wizard will start automatically.
2. Otherwise start **CDsetup.exe** from the CD-ROM. Follow the instructions of the wizard until the installation is finished.

The installation wizard will place a launch icon on the desktop and in the start menu:
Start\Programs\CompactConnect

To uninstall the software from your system use the **uninstall** icon in the start menu.

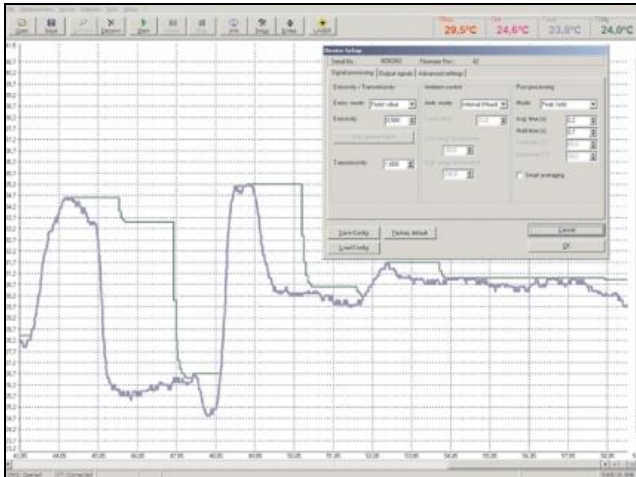


Figure 14: Software CompactConnect

Main functions:

- Graphic display for temperature trends and automatic data logging for analysis and documentation
- Complete sensor setup and remote controlling
- Adjustment of signal processing functions
- Programming of outputs and functional inputs

5 Digital command set

Kommandoliste CS/ CSmicro/ CX							
DEZIMAL	HEX	Binär / ASCII	Kommando	Daten	Antwort	Ergebnis	Einheit
1	0x01	Binär	LESEN Temp - Target	keine	byte1 byte2	$= (\text{byte1} \times 256 + \text{byte2} - 1000) / 10$	°C
2	0x02	Binär	LESEN Temp - Head	keine	byte1 byte2	$= (\text{byte1} \times 256 + \text{byte2} - 1000) / 10$	°C
3	0x03	Binär	LESEN aktuelle Temp - Target	keine	byte1 byte2	$= (\text{byte1} \times 256 + \text{byte2} - 1000) / 10$	°C
4	0x04	Binär	LESEN Emissionsgrad	keine	byte1 byte2	$= (\text{byte1} \times 256 + \text{byte2}) / 1000$	
5	0x05	Binär	LESEN Transmission	keine	byte1 byte2	$= (\text{byte1} \times 256 + \text{byte2}) / 1000$	
9	0x09	Binär	LESEN Prozessor Temperatur	keine	byte1	$= (\text{byte1} \times 256 + \text{byte2} - 1000) / 10$	
14	0x0E	Binär	LESEN Serien Nummer	keine	byte1 byte2 byte3	$= \text{byte1} \times 65536 + \text{byte2} \times 256 + \text{byte3}$	
15	0x0F	Binär	LESEN FW Rev.	keine	byte1 byte2	$= \text{byte1} \times 256 + \text{byte2}$	
129	0x81	Binär	SETZEN DAC mV/ mA	byte1	byte1	$\text{byte1} = \text{mV (mA)} \times 10$ (z.B. 4mA = 4 x 10=40)	°C
130	0x82	Binär	RÜCKSETZEN der DAC mV/ mA Ausgabe				
132	0x84	Binär	SETZEN Emissionsgrad	byte1 byte2	byte1 byte2	$= (\text{byte1} \times 256 + \text{byte2}) / 1000$	

Temperaturberechnung bei CSmicro hs: $(\text{byte1} \times 256 + \text{byte2} - 10000) / 100$

BEISPIELE (alle Bytes in HEX)

Lesen der Objekttemperatur

Senden: 01 Kommando zum Lesen der Objekt Temperatur
 Empfangen: 04 D3 Objekttemperatur in Zehntel Grad + 1000 04 D3 = dez. 1235
 1235 - 1000 = 235
 235 / 10 = **23,5 °C**

Lesen der Objekttemperatur (bei CSmicro 2Whs)

Senden: 01 Kommando zum Lesen der Objekt Temperatur
 Empfangen: 30 3E Objekttemperatur in Hundertstel Grad + 10000 30 3E = dez. 12350
 12350 - 10000 = 2350
 2350 / 100 = **23,50 °C**

Setzen des Emissionsgrades

Senden: 84 03 B6 03B6 = dez. 950
 Empfangen: 03 B6 950 / 1000 = **0,950**

Burstmode (unidirektional)			
Nach Aktivierung wird ein kontinuierliches Signal erzeugt. Der Burst-String kann mit Hilfe der Software konfiguriert werden.			
Burst string	Beispiel	kompletter Burst-String	Umsetzung in Dezimalwert
2 Synchronisations-Bytes: AAAA	-----	AAAA 03B8	-----
2 Bytes für jeden Ausgangswert (Hi LO)	03B8	AAAA 03B8	Prozesstemp. [°C] = (Hex \Rightarrow Dec(03B8)-1000)/10 = -4,8

Figure 15: Digital command set

6 Basics of Infrared Thermometry

Depending on the temperature each object emits a certain amount of infrared radiation. A change in the temperature of the object is accompanied by a change in the intensity of the radiation. For the measurement of “thermal radiation” infrared thermometry uses a wave-length ranging between 1 μm and 20 μm . The intensity of the emitted radiation depends on the material. This material contingent constant is described with the help of the emissivity which is a known value for most materials (► **7 Emissivity**).

Infrared thermometers are optoelectronic sensors. They calculate the surface temperature on the basis of the emitted infrared radiation from an object. The most important feature of infrared thermometers is that they enable the user to measure objects contactless. Consequently, these products help to measure the temperature of inaccessible or moving objects without difficulties. Infrared thermometers basically consist of the following components:

- lens
- spectral filter
- detector
- electronics (amplifier/ linearization/ signal processing)

The specifications of the lens decisively determine the optical path of the infrared thermometer, which is characterized by the ratio Distance to Spot size.

The spectral filter selects the wavelength range, which is relevant for the temperature measurement. The detector in cooperation with the processing electronics transforms the emitted infrared radiation into electrical signals.

7 Emissivity

7.1 Definition

The intensity of infrared radiation, which is emitted by each body, depends on the temperature as well as on the radiation features of the surface material of the measuring object. The emissivity (ϵ – Epsilon) is used as a material constant factor to describe the ability of the body to emit infrared energy. It can range between 0 and 100 %. A “blackbody” is the ideal radiation source with an emissivity of 1.0 whereas a mirror shows an emissivity of 0.1.

If the emissivity chosen is too high, the infrared thermometer may display a temperature value which is much lower than the real temperature – assuming the measuring object is warmer than its surroundings. A low emissivity (reflective surfaces) carries the risk of inaccurate measuring results by interfering infrared radiation emitted by background objects (flames, heating systems, chamottes). To minimize measuring errors in such cases, the handling should be performed very carefully and the unit should be protected against reflecting radiation sources.

7.2 Determination of unknown emissivity

- ▶ First determine the actual temperature of the measuring object with a thermocouple or contact sensor. Second, measure the temperature with the infrared thermometer and modify the emissivity until the displayed result corresponds to the actual temperature.
- ▶ If you monitor temperatures of up to 380 °C you may place a special plastic sticker (emissivity dots – **Order No.: ACLSED**) onto the measuring object, which covers it completely. Set the emissivity to 0.95 and take the temperature of the sticker. Afterwards, determine the temperature of the adjacent area on the measuring object and adjust the emissivity according to the value of the temperature of the sticker.
- ▶ Cover a part of the surface of the measuring object with a black, flat paint with an emissivity of 0,98. Adjust the emissivity of your infrared thermometer to 0,98 and take the temperature of the colored surface. Afterwards, determine the temperature of a directly adjacent area and modify the emissivity until the measured value corresponds to the temperature of the colored surface.

CAUTION: On all three methods the object temperature must be different from ambient temperature.

7.3 Characteristic emissivity

In case none of the methods mentioned above help to determine the emissivity you may use the emissivity table ► **Appendix A – Table of emissivity for metals** and **Appendix B - Table of emissivity for non-metals**. These are average values, only. The actual emissivity of a material depends on the following factors:

- temperature
- measuring angle
- geometry of the surface
- thickness of the material
- constitution of the surface (polished, oxidized, rough, sandblast)
- spectral range of the measurement
- transmissivity (e.g. with thin films)

Appendix A – Table of emissivity for metals

Material		typical Emissivity
Aluminium	non oxidized	0,02-0,1
	polished	0,02-0,1
	roughened	0,1-0,3
	oxidized	0,2-0,4
Brass	polished	0,01-0,05
	roughened	0,3
	oxidized	0,5
Copper	polished	0,03
	roughened	0,05-0,1
	oxidized	0,4-0,8
Chrome		0,02-0,2
Gold		0,01-0,1
Haynes	alloy	0,3-0,8
Inconel	electro polished	0,15
	sandblast	0,3-0,6
	oxidized	0,7-0,95
Iron	non oxidized	0,05-0,2
	rusted	0,5-0,7
	oxidized	0,5-0,9
	forged, blunt	0,9
Iron, casted	non oxidized	0,2
	oxidized	0,6-0,95
Lead	polished	0,05-0,1


Material		typical Emissivity
Lead	roughened	0,4
	oxidized	0,2-0,6
Magnesium		0,02-0,1
Mercury		0,05-0,15
Molybdenum	non oxidized	0,1
	oxidized	0,2-0,6
Monel (Ni-Cu)		0,1-0,14
Nickel	electrolytic	0,05-0,15
	oxidized	0,2-0,5
Platinum	black	0,9
Silver		0,02
Steel	polished plate	0,1
	rustless	0,1-0,8
	heavy plate	0,4-0,6
	cold-rolled	0,7-0,9
	oxidized	0,7-0,9
Tin	non oxidized	0,05
Titanium	polished	0,05-0,2
	oxidized	0,5-0,6
Wolfram	polished	0,03-0,1
Zinc	polished	0,02
	oxidized	0,1

Appendix B - Table of emissivity for non-metals

Material		typical Emissivity			
		1,0 μm	2,2 μm	5,1 μm	8-14 μm
Spectral response					
Asbestos		0,9	0,8	0,9	0,95
Asphalt				0,95	0,95
Basalt				0,7	0,7
Carbon	non oxidized		0,8-0,9	0,8-0,9	0,8-0,9
	graphite		0,8-0,9	0,7-0,9	0,7-0,8
Carborundum			0,95	0,9	0,9
Ceramic		0,4	0,8-0,95	0,8-0,95	0,95
Concrete		0,65	0,9	0,9	0,95
Glass	plate		0,2	0,98	0,85
	melt		0,4-0,9	0,9	
Grit				0,95	0,95
Gypsum				0,4-0,97	0,8-0,95
Ice					0,98
Limestone				0,4-0,98	0,98
Paint	non alkaline				0,9-0,95
Paper	any color			0,95	0,95
Plastic >50 μm	non transparent			0,95	0,95
Rubber				0,9	0,95
Sand				0,9	0,9
Snow					0,9
Soil					0,9-0,98
Textiles				0,95	0,95
Water					0,93
Wood	natural			0,9-0,95	0,9-0,95

Appendix C – Direct connection to a RS232 interface

For a bidirectional RS232 connection of the sensor we recommend the interface circuit from Maxim, e.g. **MAX3381E**.

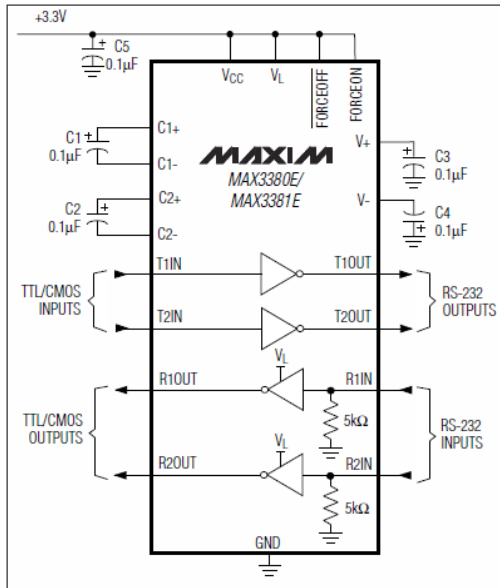

Model

UART-Voltage (RxD)

UART-Voltage (TxD)

CX

3,3 V

2,5 V

CX connections:

TxD (yellow) an T1IN

RxD (green) an R1OUT

GND (brown) an GND

PC connections:


connect T1OUT with RxD
(PC)

connect R1IN with TxD (PC)


Appendix D - Smart Averaging

The average function is generally used to smoothen the output signal. With the adjustable parameter time this function can be optimal adjusted to the respective application. One disadvantage of the average function is that fast temperature peaks which are caused by dynamic events are subjected to the same averaging time. Therefore those peaks can only be seen with a delay on the signal output.

The function **Smart Averaging** eliminates this disadvantage by passing those fast events without averaging directly through to the signal output.

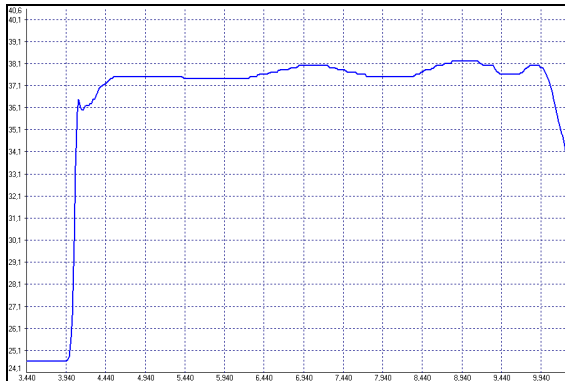

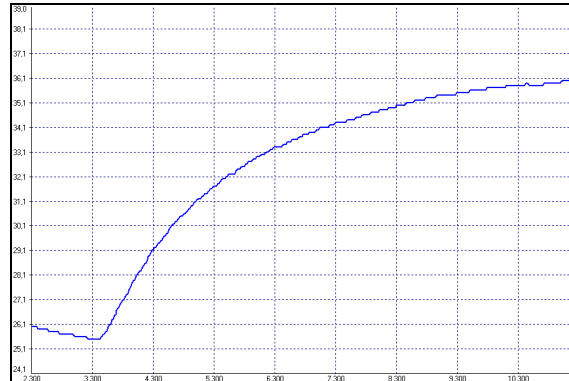

Signal graph with Smart Averaging function



Signal graph without Smart Averaging function

Appendix E – Declaration of Conformity

<p>EG-Konformitätserklärung EU Declaration of Conformity</p>	
<p>Wir / We</p>	<p>Optris GmbH Ferdinand Buisson Str. 14 D-13127 Berlin</p>
<p>erklären in alleiniger Verantwortung, dass declare on our own responsibility that</p>	<p>die Produktserie optris CX/ CX hs the product group optris CX/ CX hs</p>
<p>den Anforderungen der EMV-Richtlinie 2014/30/EU und der Niederspannungsrichtlinie 2014/35/EU entspricht. meets the provisions of the EMC Directive 2014/30/EU and the Low Voltage Directive 2014/35/EU.</p>	
<p>Angewandte harmonisierte Normen: Applied harmonized standards:</p>	
<p>EMV Anforderungen / EMC General Requirements:</p>	
<p>EN 61326-1:2013 (Grundlegende Prüfanforderungen / Basic requirements) EN 61326-2-3:2013</p>	
<p>Gerätesicherheit von Messgeräten / Safety of measurement devices:</p>	
<p>EN 61010-1:2010 EN 60825-1:2015 (Lasersicherheit / Laser safety)</p>	
<p>Dieses Produkt erfüllt die Vorschriften der Richtlinie 2011/65/EU (RoHS) des Europäischen Parlaments und des Rates vom 8. Juni 2011 zur Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten. This product is in conformity with Directive 2011/65/EU (RoHS) of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.</p>	
<p>Berlin, 04.11.2015</p>	
<p>Ort, Datum / place, date</p>	<p>Dr. Ulrich Kientz Geschäftsführer / General Manager</p>

optris CX-MA-E2018-08-A